

Step 1

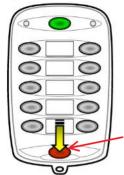


Press and hold the red button.

Step 2

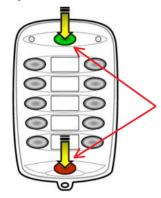


While holding the red button, press and hold the green button.

Step 3

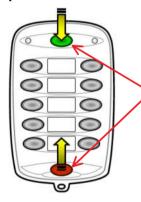


Release the red button but continue to hold the green button.

Step 4

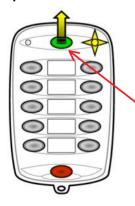


Release the green button.
If all steps were done
correctly the remotes active
will be slowly flashing. **The
remote is now in download
mode**

Step 5 (Option 1) *USE THIS FOR R260 Modules*

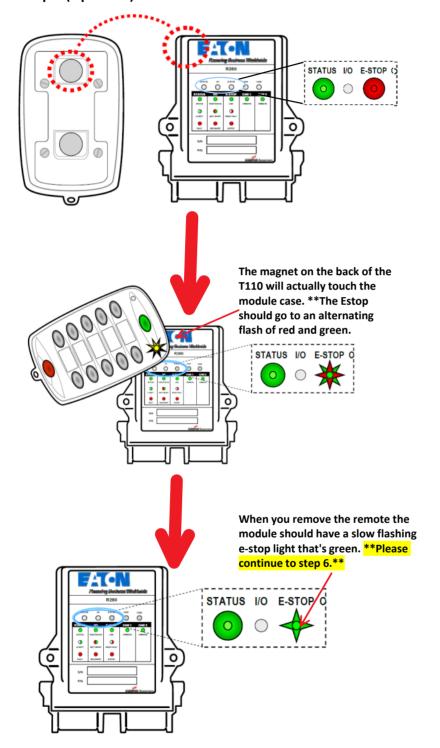


Step 5 (Option 2) **Use this for R160 & R170 Modules**

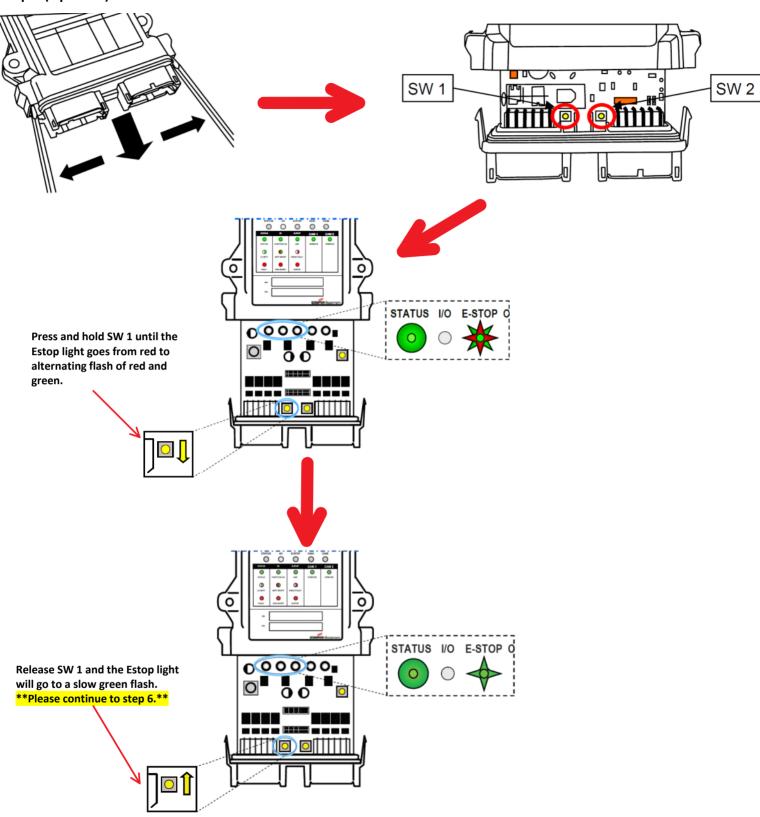

Step 6

Press the green button to download the ID code. ** The remote needs to still be in download mode (please see step 4).**

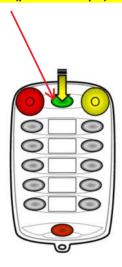

When the remote ID code is completely downloaded the remote will turn off and the module's Estop light will go from flashing green to solid red.



