



OWNER'S MANUAL

220 SNATCHER

PARTS

NOTE: MANUAL including SPECIFICATIONS, subject to change without notice.

All ratings specified are based on structural factors only,
not vehicle capacities or capabilities.



Miller Industries Towing Equipment Inc. 8503 Hilltop Drive Ooltewah, Tennessee 37363 Phone (423) 238-4171 • FAX (423) 238-5371

FORM NO. 0501700 04 / 2010 PRICE \$25.00

LIMITED WARRANTY

MILLER INDUSTRIES TOWING EQUIPMENT INC., hereinafter referred to as MILLER, warrants to the original purchaser that each new MILLER wrecker or other MILLER products will be free from defects in material and workmanship for a period of twelve (12) months from date placed in service, but in no event shall such warranty period exceed twenty-four (24) months from date of manufacture by MILLER. The purchaser must promptly notify MILLER in writing of any failure in material or workmanship. In no event shall MILLER accept such notification later than twenty-four (24) months from date of delivery or twelve (12) months from date placed in service, whichever is earlier.

MILLER's obligation under this warranty, statutory or otherwise, is limited to the repair or replacement at the MILLER factory, or at a point designated by MILLER, of such part or parts as shall appear upon inspection by MILLER to be defective in material or workmanship. New or remanufactured parts will be used for any replacement at MILLER's option. This warranty is not transferable. This warranty does not obligate MILLER to bear the cost of labor or transportation charges in connection with the repair or replacement of any parts found to be defective, nor shall it apply to a product upon which repairs or alterations have been made unless authorized by MILLER.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, MILLER MAKES NO OTHER WARRANTY, EXPRESS OR IMPLIED, AND HEREBY DISCLAIMS ALL OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. MILLER shall in no event be liable for claimed downtime, claimed loss of profits or goodwill, or any other special, incidental, indirect, or consequential damages concerning or relating to any product or parts, whether based on negligence, strict liability, breach of contract, breach of warranty, misrepresentation or any other legal theory, regardless of whether the loss resulted from any general or particular requirement which MILLER knew or had reason to know about at the time of sale.

MILLER MAKES NO WARRANTY, EXPRESS OR IMPLIED, AS TO THE FINISHED PRODUCTS MANUFACTURED OR SUPPLIED BY ANOTHER MANUFACTURER AND SUPPLIED BY MILLER TO PURCHASER, including, but not limited to, any vehicle to which a MILLER product may be affixed or any accessories or wire rope, and MILLER EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE AS TO SUCH EQUIPMENT OR PRODUCTS. This language shall in no way affect or diminish the rights of the purchaser to rely on such warranties as are extended by such manufacturers or suppliers. MILLER shall, to the extent permitted under applicable law, pass on to the purchaser such manufacturer's or seller's warranty.

MILLER, whose policy is one of continuous improvement, reserves the right to improve its products through changes in design or materials as it may deem desirable without being obligated to incorporate such changes in products previously sold. This warranty is not intended to cover or include the following items, which are set forth by way of example and not limitation:

- A. Normal deterioration of trim, paint, lettering, and appearance items due to wear or exposure to weather, road conditions, road treatments, etc.
- B. Any damage or defect due to accident, misuse, abuse, improper or unauthorized repairs, failure to provide reasonable and necessary maintenance, or uses for which the equipment was not designed or intended.
- C. Alterations or modifications that affect performance, operation or reliability.
- D. Normal maintenance parts including, but not limited to, wear pads, bushings, wire rope, mud flaps, fenderettes, light bulbs, hydraulic oil, filters, and tow sling belts.

IT IS EXPRESSLY UNDERSTOOD THAT MILLER MAKES NO IMPLIED WARRANTY THAT MILLER PRODUCTS SHALL BE FIT FOR THE PURPOSE OF LIFTING OR MOVING PEOPLE OR FOR ANY OTHER IMPROPER USE.



Miller Industries Towing Equipment Inc. 8503 Hilltop Drive Ooltewah, Tennessee 37363 Telephone (423) 238-4171

	 	•

SERIAL NUMBER

OWNER, USER AND OPERATOR:

We appreciate your choice of our towing and recovery unit for your application. Our number one priority is user safety which is best achieved by our joint efforts. We feel that you can make a major contribution to safety if you, as the equipment owner and operator:

- 1. Comply with Federal, State, and Local Regulations.
- 2. Read, Understand, and Follow the Instructions in this Manual.
- 3. Use Good, Safe Work Practices in a Common Sense Way.
- 4. Only have Authorized and Trained Personnel performing maintenance on the Towing and Recovery Unit.

TABLE OF CONTENTS

It is assumed by the manufacturer that the Owner/Operator has a thorough knowledge of the accepted and lawful retrieval and towing methods as dictated by his city, county or state. The manufacturer rejects any liability claim that may result from the incorrect or unlawful application of its equipment.

Section I - PARTS

SUBFRAME ASSEMBLY	I-2 & I-3
BOOM ASSEMBLY	I-4 & I-5
WHEEL LIFT ASSEMBLY	I-6 & I-7
CROSSBAR ASSEMBLY	I-8 & I-9
BOOM HYDRAULICS	I-10 & I-11
WHEEL LIFT HYDRAULICS	I-12 & I-13
CLAW HYDRAULICS	I-14 & I-15

Section VI - PARTS

This Section is provided by the manufacturer for the purpose of ordering any component part of the **Holmes 220 Snatcher** that may be required when part replacement is necessary. Be certain to use only original equipment replacement parts for warranty purposes as well as for keeping your unit in its original state and optimum operating capacities.


When ordering replacement or spare parts be sure to provide the following information to the manufacturer's **Parts Department**.

- 1. Manual Number & Date of Publication
- 2. Manual Page Number
- 3. Page Title
- 4. Reference Number of Part Desired
- 5. Part Number
- 6. Part Description
- 7. Quantity of Part Desired

Providing this information will help ensure that the correct parts will be delivered to you in an expedient manner without delay. Should additional information be required for repair or replacement of certain components, contact your Wrecker Manufacturer Authorized Representative.

The Manufacturer reserves the right, without notice or obligation, to improve or modify their products, which may change the specifications, models and feature availability.

Section I - PARTS (cont'd) SUBFRAME ASSEMBLY

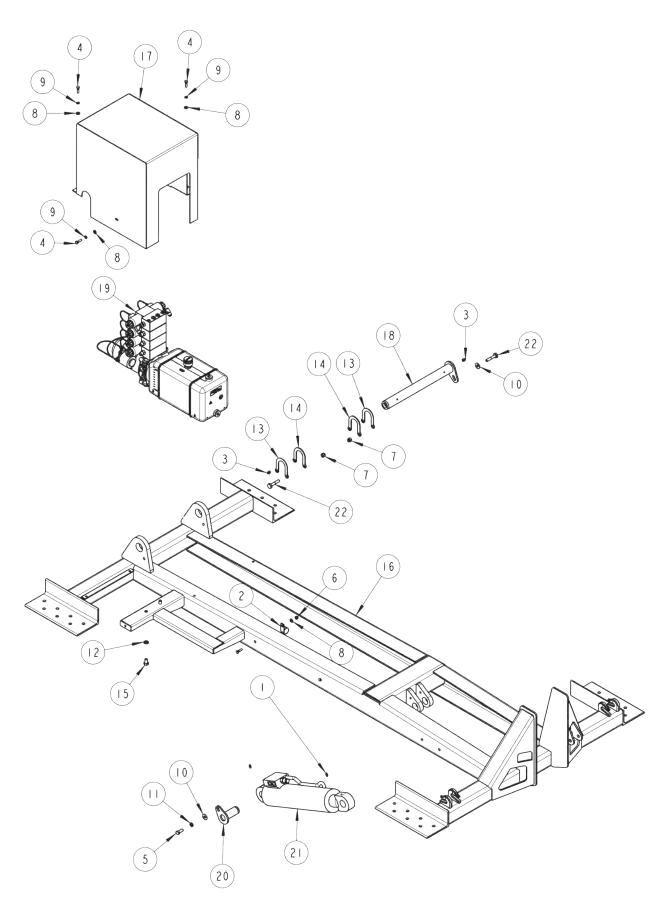


Section I - PARTS (cont'd) SUBFRAME ASSEMBLY

1 0300113 GREASE FITTING, 1/4-28 STRAIGHT 2 2 0300134 HOSE CLAMP, 1" INSULATED 2 3 0301895 GREASE FITTING, 1/8 NPT STRAIGHT 2 4 0400070 1/4-20 X 1 HHCS GR5 ZP 4 5 0400126 3/8-16 X 1 HHCS GR5, ZP 1 6 0400367 1/4-20 NYLOCK HEX NUT ZP 2 7 0400392 3/8-16 NYLOCK HEX NUT ZP 2 8 0400451 1/4 FLAT WASHER ZP 6 9 0400462 1/4 HELICAL LOCK WASHER ZP 4 10 0400480 3/8 FLAT WASHER ZP 2 11 0400487 7/16 HELICAL LOCK WASHER ZP 1 12 0400487 7/16 HELICAL LOCK WASHER ZP 2 13 0719519 SHIM- BOOM PIVOT (.0747 THICK) 2 14 0719520 SHIM- BOOM PIVOT (.1196 THK) 2 15 9041353 7/16-20 UNF X 3/4 LG. HHCS 2 16 25318004 SUBFRAME WELDT 1 17 25318008 HPU COVER WELDMENT 1 18 25318010 BOOM PIVOT PIN WELDMENT 1 19 25319009 HPU ASSEMBLY 1 20 805351000 PIN WELDMENT 1 21 810710000 LIFT CYLINDER 1 22 HD0230 3/8-16 X 2 HHCS GR5 ZP 2

Section I - PARTS (cont'd)

BOOM ASSEMBLY

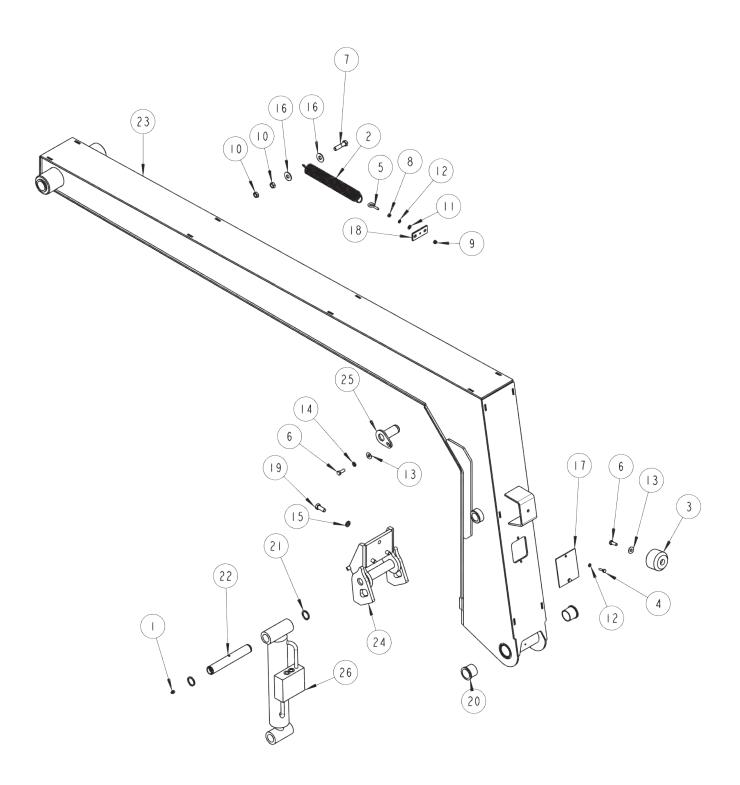


Section I - PARTS (cont'd)

BOOM ASSEMBLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26	0301895 0303521 0306688 0400070 0400082 0400126 0400343 0400366 0400367 0400410 0400452 0400480 0400492 0708519 0718102 9041402 9053713 9056125 25317081 25318001 25318005 805351000 810730000	GREASE FITTING, 1/8 NPT STRAIGHT SPRING, HOSE TENSIONER TIMBREN SPRING 1/4-20 X 1 HHCS GR5 ZP 1/4-20 X 1.125 EYE BOLT 3/8-16 X 1 HHCS GR.5,ZP 1/2-13 X 2 HHCS GR.8,ZP 1/4-20 NYLOCK HEX NUT ZP 1/4-20 NYLOCK HEX NUT ZP NUT, 1/2"-13 HEX JAM ZP 1/4 FLAT WASHER ZP 1/4 HELICAL LOCK WASHER ZP 3/8 FLAT WASHER ZP 1/2 HELICAL LOCK WASHER ZP 1/2 HELICAL LOCK WASHER ZP 1/2 FLAT WASHER ZP PLATE, ACCESS COVER BAR HOSE TENSIONER 1/2-13NC X 1 1/4 HHCS, ZP,GR.8 FLANGE BEARING, 1-1/2" I.D. OILITE SNAP RING - 1-1/4" HEAVY DUTY PIN, UPPER TILT CYLINDER BOOM - PICKUP WHEEL SNATCHER TILT STOP WELDT PIN WELDMENT CYLINDER HYDRAULIC FOLD	QTY 1
15 16 17 18 19 20 21 22 23 24 25	0400491 0400492 0708519 0718102 9041402 9053713 9056125 25317081 25318001 25318005 805351000	1/2 HELICAL LOCK WASHER ZP 1/2 FLAT WASHER ZP PLATE, ACCESS COVER BAR HOSE TENSIONER 1/2-13NC X 1 1/4 HHCS, ZP,GR.8 FLANGE BEARING, 1-1/2" I.D. OILITE SNAP RING - 1-1/4" HEAVY DUTY PIN, UPPER TILT CYLINDER BOOM - PICKUP WHEEL SNATCHER TILT STOP WELDT PIN WELDMENT	3 2 1 1 3 2 2 1 1 1


Section I - PARTS (cont'd) WHEEL LIFT BOOM ASSEMBLY

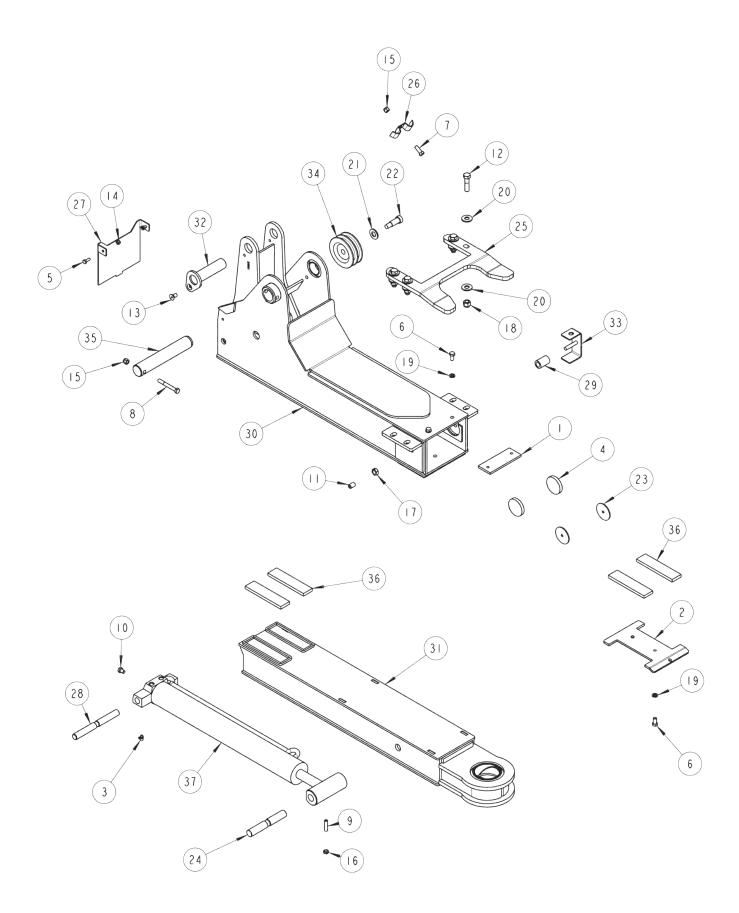

Section I - PARTS (cont'd) WHEEL LIFT BOOM ASSEMBLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37	3012-794003 3012-794004 0301397 0306819 0400066 0400121 0400126 0400133 0400139 0400154 0400204 0400343 0400349 0400367 0400392 0400398 0400410 0400416 0400482 0400497 0400505 0400606 0717674 0718216 0718217 9048166 25317020 25317105 25317200 25318003 25318011 25318013 810040004 810350001 896040002 0310639	BAR - SPACER PLATE - UL PAD CAGE GREASE FITTING, 90 DEG PAD, SLIDE 1/4-20 X 3/4 HHCS GR.5,ZP 3/8-16NC X 3/4 HHCS GR. B 3/8-16 X 1 HHCS GR.5,ZP 3/8-16 X 3 HHCS GR.5,ZP SCREW, 3/8"-16 X 1-1/2" HEX SKT SET 3/8-16 X 1/2 HHCS GR.5,ZP 1/2-13X3/4 SKT HD SET 1/2-13 X 2 HHCS GR.8,ZP SCREW, 3/8"-16 X 3/4" FL HD SKT 1/4-20 NYLOCK HEX NUT ZP 3/8-16 NYLOCK HEX NUT ZP 3/8-16 NYLOCK HEX NUT ZP 3/8-16 NYLOCK HEX NUT GR.8, ZP 3/8-16 NYLOCK HEX NUT CR.8, ZP 3/8-16 NYLOCK HEX NUT CR.8, ZP 3/8-16 NYLOCK HEX NUT ZP 3/8-16 NYLOC	QTY 1 1 2 2 4 1 1 1 2 4 1 2 1 2 4 4 8 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1


Section I - PARTS (cont'd) CROSSBAR ASSEMBLY

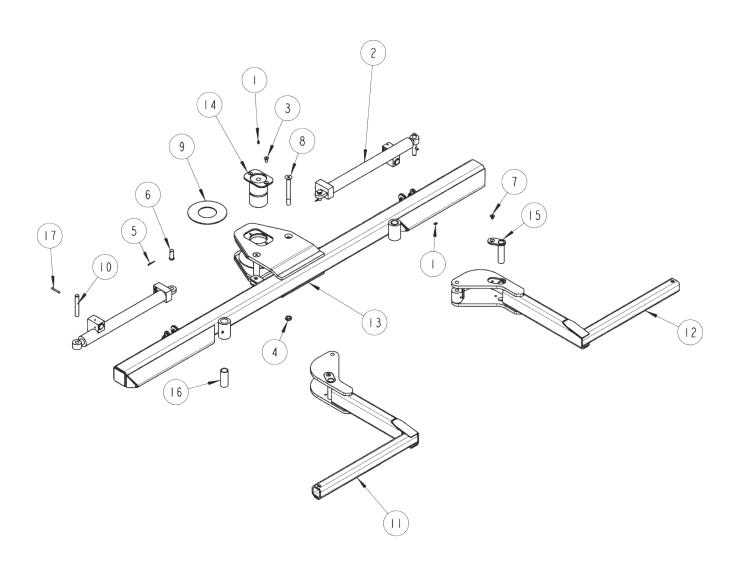

Section I - PARTS (cont'd) CROSSBAR ASSEMBLY

ITEM	PART NUMBER	DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17	0300113 0303844 0400349 0400428 0400546 0400590 0400667 0401006 0710092 0713885 0806978 0806980 0806981 0806982 E300002 HD0106	GREASE FITTING, 1/4-28 STRAIGHT CYLINDER, SWING L-ARM SCREW, 3/8"-16 X 3/4" FL HD SKT 5/8-11 FLEXLOC THIN HIGH COTTER PIN, 1/8" X 1-1/4" CLEVIS PIN 3/8-16X1/2 FLT SOC HD THREAD LOCK 3/8"-16 X 1" FL HD SKT CAP SCREW THRUST WASHER PIN - CYLINDER (L-ARM END) LEFT L ARM WLDT CROSSBAR WELDMENT PIN PIVOT WLDT-XBAR PIN L ARM PIVOT BEARING - CLAW PIVOT 1/4 X 1-3/4 ROLL PIN ZP	3 2 2 2 2 2 2 2 2 1 1 1 1 2 2 2 2

Section I - PARTS (cont'd) BOOM HYDRAULICS

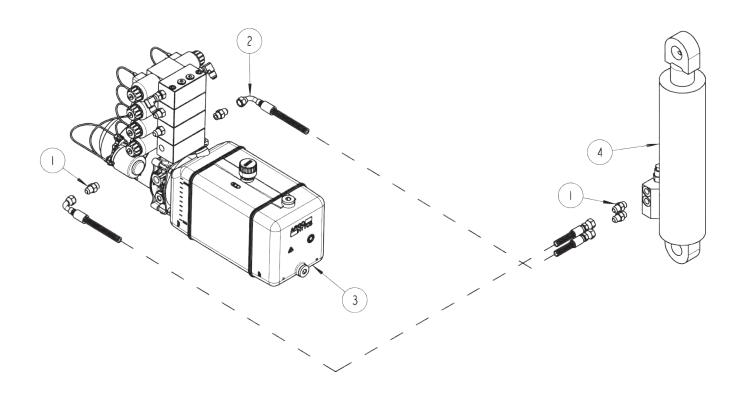


Section I - PARTS (cont'd)

BOOM HYDRAULICS

1 0301522 CONNECTOR 6MJ-6MB 9 2 0310311 HOSE ASSY - 72" LG 2 3 25319009 HPU ASSEMBLY 1 4 810710000 LIFT CYLINDER 1


Section I - PARTS (cont'd) WHEEL LIFT HYDRAULICS

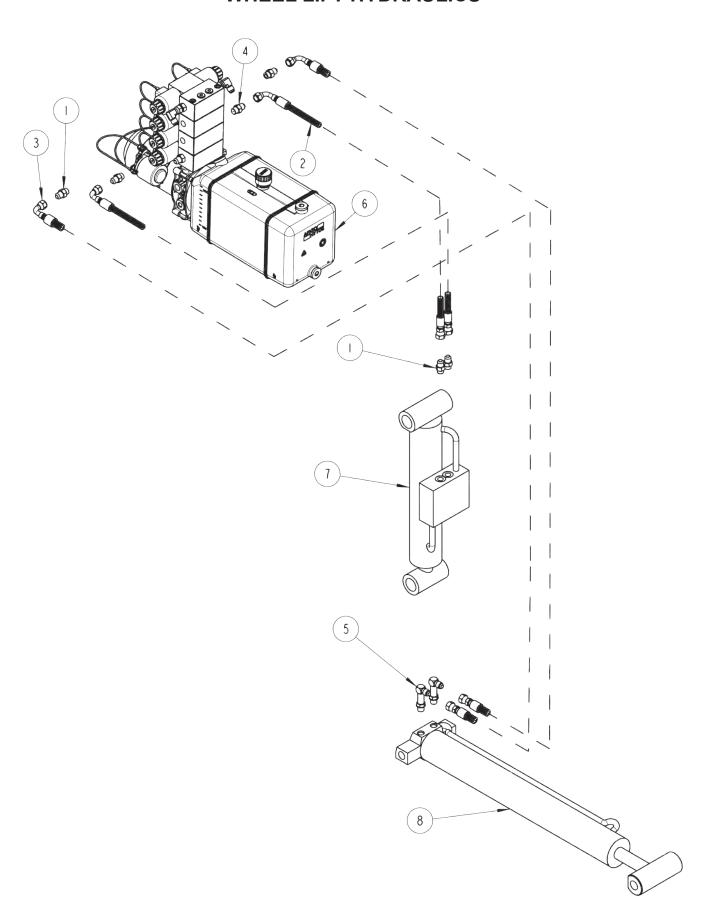

Section I - PARTS (cont'd) WHEEL LIFT HYDRAULICS

ITEM	PART NUMBER	DESCRIPTION	QTY
1 2 3 4 5 6 7 8	0301522 0301921 0302922 0307042 0307460 25319009 810730000 0310639	CONNECTOR 6MJ-6MB HOSE ASSEMBLY, 170" LG CONNECTOR, (6MJ-6MBR-3/64) FITTING, ELBOW, 6MJ-6MB90L HPU ASSEMBLY CYLINDER HYDRAULIC FOLD CYLINDER 2.5 BORE X 1.13	9 2 2 1 2 1 1 1 1

Section I - PARTS (cont'd) CLAW HYDRAULICS

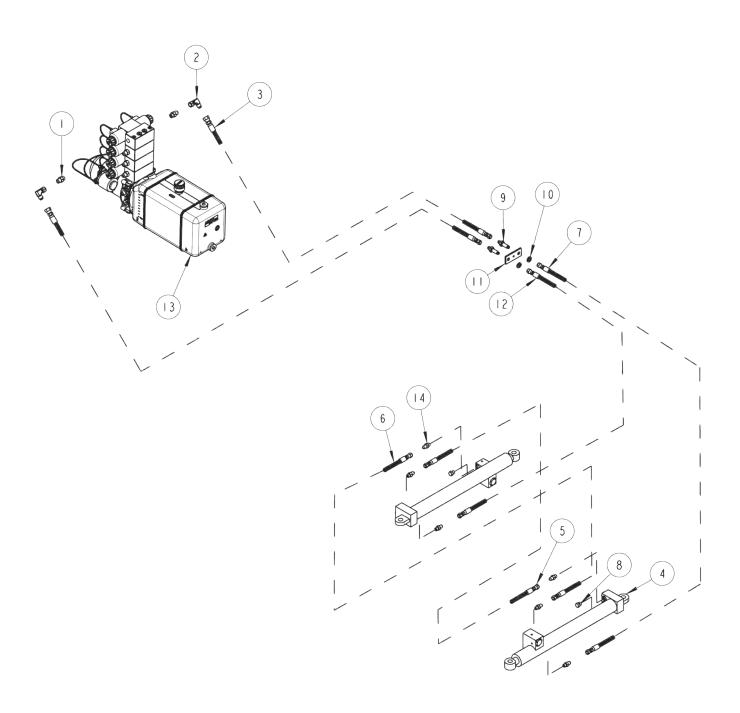

Section I - PARTS (cont'd)

CLAW HYDRAULICS

ITEM	PART NUMBER	DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10 11 12 13 14	0301522 0301696 0302531 0303844 0303860 0303861 0303886 0306817 0400487 0718102 25313002 25319009 HC1291	CONNECTOR 6MJ-6MB ELBOW, 6MJ-6FJX90 HOSE ASSY - 75" LG CYLINDER, SWING L-ARM HOSE ASSEMBLY, 10-3/4" HOSE ASSEMBLY, 17" HOSE ASSEMBLY - 112" LG PLUG - 1/4 SAE O-RING BULKHEAD UNION (4MJ-4BLKHD W/NUT) 7/16 HELICAL LOCK WASHER ZP BAR HOSE TENSIONER HOSE ASSEMBLY - 110" LG HPU ASSEMBLY CONNECTOR, 4MJ-4MB STR	7 2 2 1 1 1 2 2 2 1 1 1 6

NOTES

NOTES

